

INSTRUCTIONS

FOR REMOVING ELECTRONIC TIMER PART No: 2021 &
RETROSPECTIVELY FITTING LCD TIMER PART No: 2142
TO
SILESIA GRILL MODELS T10 & T20
VELOX GRILL MODELS CG1 & CG2

WARNING: THIS COMPONENT SHOULD ONLY BE FITTED BY A SUITABLY QUALIFIED TECHNICIAN.
THE APPLIANCE MUST BE ISOLATED FROM THE ELECTRICAL SUPPLY BEFORE FITTING THIS COMPONENT.



SILESIA VELOX
208 Frimley Road
Camberley
GU15 2QJ



Fig. 1

Remove the 2 x M4 bolts from the now exposed timer mounting plate on the front of the grill & dispose of plate (Fig 2).



Fig. 2



Fig. 3

Turn the grill upside down & remove the 4 (8 on double models) PK screws from the base cover & remove the cover (Fig 3).

Remove the 2 timer power wires from the top of the green and orange neon lights and the 3 wires from the timer activation switch (Fig 4).



Fig. 4



Fig. 5

Depress the 2 spring clips on the top & 2 on the bottom of the timer switch & remove the switch from the front of the chassis. Remove the timer board. (Fig 5).

Dispose of the timer switch & the electronic timer board. (Fig 6).



Fig. 6



Fig. 7

Remove the 2 x M4 bolts from the ends of the new timer & slide out the rear casing/mounting box (Fig 7 & Fig 8).

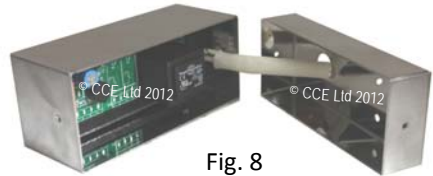


Fig. 8



Fig. 9

With the 2 x M4 bolts at the rear attach the new timer mounting box to the front of the grill with the cable access hole position over the now empty switch cut out. (Fig 9).

Before tightening the new timer mounting box, place a small layer of waterproof sealant around the edges. (Fig 10).



Fig. 10



Fig. 11

Now feed the two wires of the timer through the cable access hole into the inside of the grill chassis. Now turn the grill upside down (Fig 11 & Fig 12).



Fig. 12

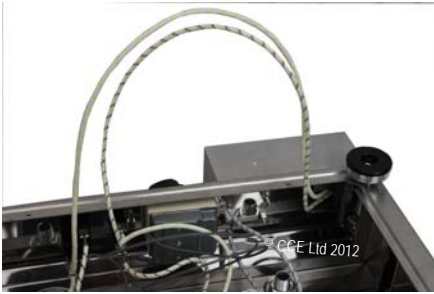


Fig. 13

Feed the wires completely into the base of the grill & push the timer into position over mounting box & secure with the 2 x M4 bolts at each end. (Fig 13).

Now push on the new timer wires spade connectors to the spare 'piggy back' connectors vacated by the old timer wires, on to the top contacts of the green and orange neons. You must make sure that you have a yellow/black to yellow/black & yellow/yellow to yellow/yellow connection. (Fig 14).

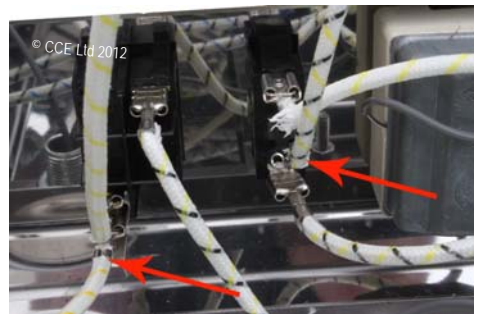


Fig. 14

Refit the base cover with the 4 (8 on double models) PK screws return the grill to the upright position, plug the grill into the mains and switch on. The timer will now come on and after 3 seconds will set itself to program number one (30 seconds). Please note, the timer works with the thermostat set to the ON or OFF position. Please give the enclosed timer operating instructions to the operator. (Fig 15).



Fig. 15